



91082

Material

Aluminium

Technical Notes

Front loading collet stop:

1. Cut stop to desired length.

- 2. Insert stop into collet slots, tighten, face off and deburr.
- 3. Remove and insert machined end into collet. Face off to desired length and deburr.
- 4. Seat into collet and clamp workpiece. Once seated the collet need not be removed for adjustment.

Self-centering and re-usable.

Order No.	Collet size	I_1	Weight
			g
91082.W0020	5C	610	168

