




Big Block Spacer Elements for big block clamps no. 10661

Adjustable Vertical Clamps

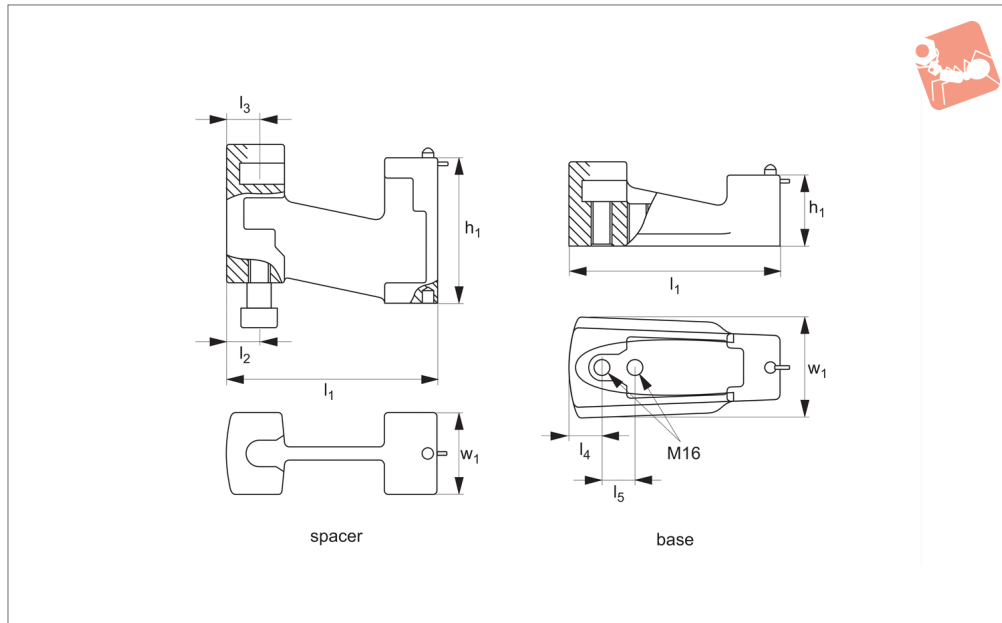

10662

ADJUSTABLE VERTICAL CLAMPS

Material

Aluminium.

Technical Notes

Base and spacer elements. For use with big block clamping system (part no. 10661).

Order No.	Type	h_1	l_1	l_2	l_3	l_4	l_5	w_1
10662.W0040	Base	55	162	-	-	25	25	75
10662.W0045	Spacer	55	162	25	25	-	-	75
10662.W0050	Spacer	110	162	25	25	-	-	75
10662.W0055	Spacer	330	162	25	25	-	-	75




A Wide Range of Clamps to Match any Requirement

CLAMPING FORCE
**UPTO
50000
NEWTONS**

ADJUSTABLE VERTICAL CLAMPS

10650 All machining operations

**16000
NEWTONS**

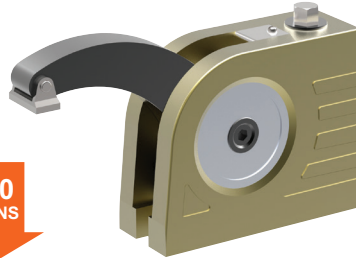

10655 Light machining

**6500
NEWTONS**




10658 Electrical discharge machining

**6500
NEWTONS**




10660 Clamping and lifting

**11000
NEWTONS**

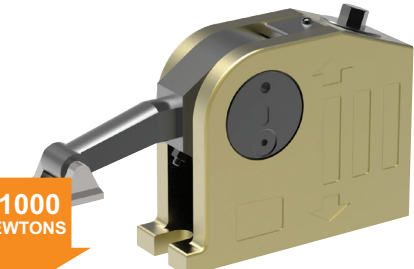


10661 Heavy machining

**40000
NEWTONS**

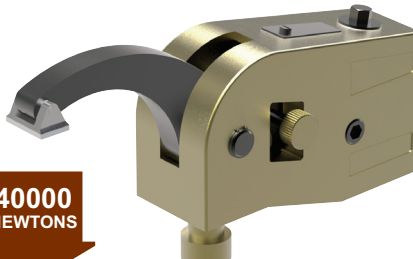


10670 Repetitive machining

**11000
NEWTONS**

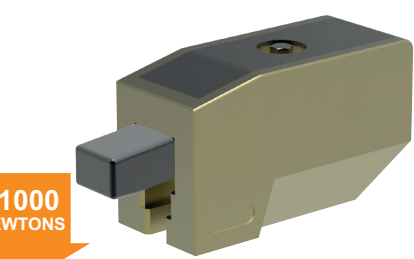


10675 Heavy machining


**35000
NEWTONS**

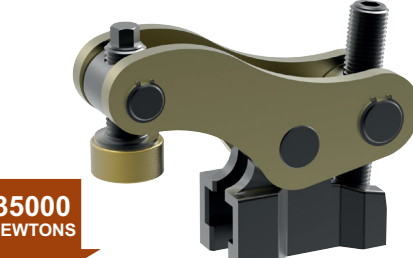

10678 Press Tool Clamping

**50000
NEWTONS**

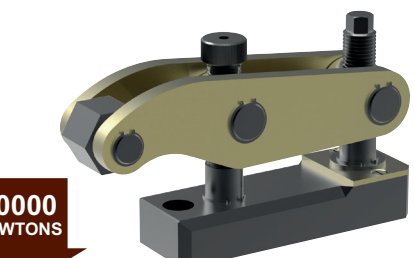

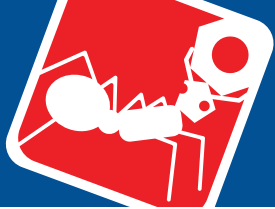


Monobloc Clamps

stackable vertical clamping


Clamping & Height Setting

ADJUSTABLE VERTICAL CLAMPS

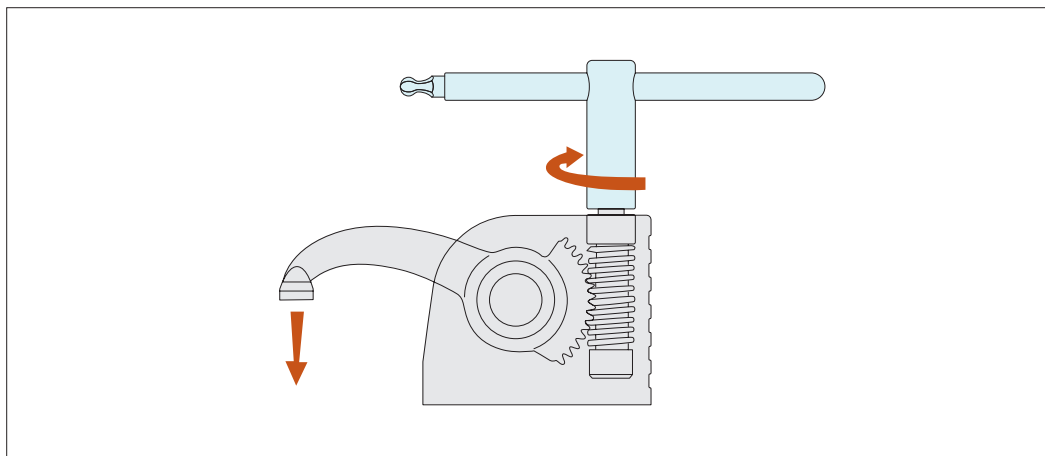


Slide the T-nut into the T-slot position and tighten the clamp onto the T-slot base, with the aid of the clamp key (shown in the image in blue).

Clamp the workpiece by twisting the key. Start machining.

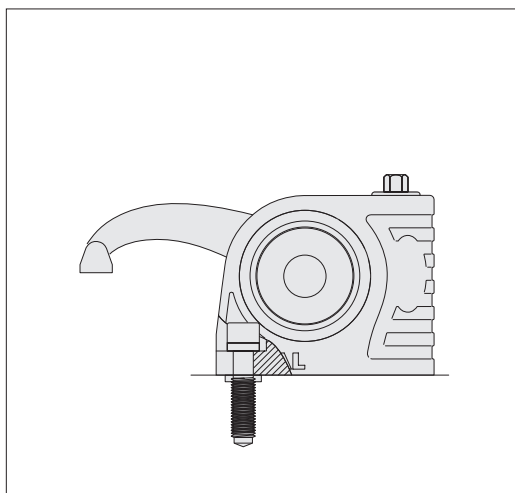


Fix to threaded bases with a special screw M10, M12, M14, M16.

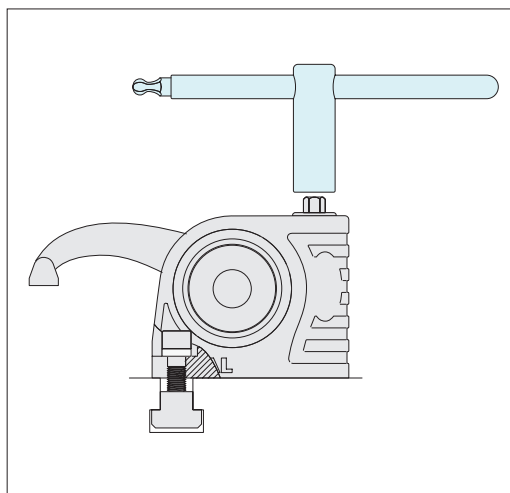

Fix to T-slots with suitable T-nuts.

When unclamped the arm and the clamp remain in position

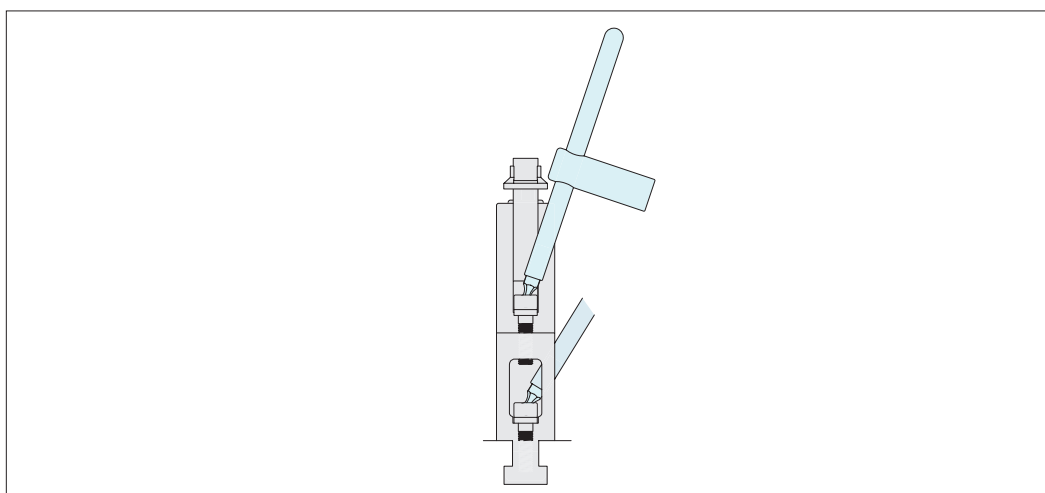

The clamps are easily stackable to achieve required clamping height.