


Side-Thrust Pins - Without Seal

for use with pins of your own design



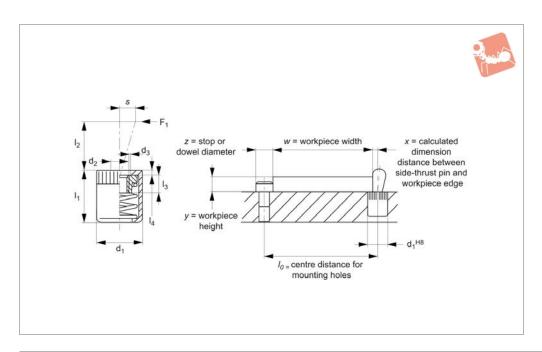



32830.1

Material

Body: aluminium.

Threaded Washer: steel, blackened. Spring: steel (blackened or blue galvanized), or stainless steel.

Technical Notes

Press fit installation into hole d₁ to tol. H8, using fitting tool (order separately). Installation calculations;

A) Calculating centre distance for mounting holes (l_0); l_0 =(z/2)+w+x

B) Calculating pin location (x);

When workpiece height (y) is greater than or equal to l_2 - $(d_2/2)$ then (x) is calculated as; $x=(d_2/2)$ -s

When workpiece height (y) is less than l_2 -(d_2 /2) then (x) is calculated as; x=(d_2 /2)-s-{[l_2 -(d_2 /2)-y]*0.123}

l₀ = centre distance for mounting holes
y = workpiece height
w = workpiece width

x = distance between side-thrust pin and workpiece edge

s = stroke

z = stop or dowel stop diameter

Tips

Side-thrust pins are ideal for holding, clamping and positioning parts.

Spring colour gives visual indication of spring pressure (N).

Light spring load = natural stainless spring.

Standard spring load = steel spring, blackened.

Heavy spring load = steel spring, blue galvanized.

Order No.	Spring load	d_1	d_2	d ₃	I ₁ -1	I ₂	l ₃	Weight g
32830.W0001	Light	10	M 4	6.3	11	2.5	4.5	2
32830.W0002	Standard	10	M 4	6.3	11	2.5	4.5	2
32830.W0003	Heavy	10	M 4	6.3	11	2.5	4.5	2
32830.W0004	Light	10	M 4	6.3	11	7.5	4.5	2
32830.W0005	Standard	10	M 4	6.3	11	7.5	4.5	2
32830.W0006	Heavy	10	M 4	6.3	11	7.5	4.5	3
32830.W0007	Light	16	M 6	10.3	18	11.5	7.5	9
32830.W0008	Standard	16	M 6	10.3	18	11.5	7.5	9
32830.W0009	Heavy	16	M 6	10.3	18	11.5	7.5	9

Order No.	I ₄	Location hole d ₁ tol. H8	Spring colour	Spring pressure N	Stroke s	Temp. resistance °C max.	Fitting tool 32810
32830.W0001	1.2	10	S/S	20	1.6	250	.W0831
32830.W0002	1.2	10	Black	50	1.6	250	.W0831
32830.W0003	1.2	10	Blue	100	1.6	250	.W0831
32830.W0004	1.2	10	S/S	40	2.0	250	.W0831
32830.W0005	1.2	10	Black	75	2.0	250	.W0831
32830.W0006	1.2	10	Blue	100	2.0	250	.W0831
32830.W0007	1.7	16	S/S	100	3.2	250	.W0833
32830.W0008	1.7	16	Black	150	3.2	250	.W0833




Spring Plunger & Detent Pins

Side-Thrust Pins - Without Seal

for use with pins of your own design



Order No.	I ₄	Location hole d ₁ tol. H8	Spring colour	Spring pressure N	Stroke s	Temp. resistance °C max.	Fitting tool 32810
32830.W0009	1.7	16	Blue	200	3.2	250	.W0833

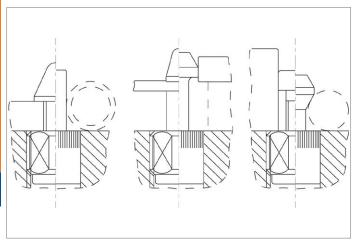





Wixroyd Index Plungers

A Wide Selection of Solutions

- Locating and positioning.
- Indexing.
- Securing.
- Positive locking.
- Rapid adjustment of all kinds of tables, platforms and fixtures.
- Machine and fixture design.
- OEM products.
- Sports equipment.
- Medical aides (wheelchairs etc.).
- Aerospace.
- Machine cabinets.

Applications





Steel with plastic grip



Stainless with plastic grip



Stainless body and grip



Locking (park)



Non locking (spring back)



Push pull





Standard grip



Lever grip



T-handle



Pull ring



Threaded for bespoke handle



Fine threaded (standard)

ov-W32460-A-T-W32790-A-T-a-rnh - Updated - 27-10-2022



Coarse thread



Flange mount



Thin wall mount



Weldable




- Many of the pins on index plungers are toleranced to either the pin or the hole. Please refer to the specific product table.
- Index plungers are not recommended for shear load applications.
- +0,03 (1) h +0,08 -0,02 H₇

Pin Tol.

Additional Hole Tol. **Technical Notes**

Mounting Options

- Stroke, or movement of plunger's pin.
- The force required in Newtons (N) to over come the static strength of the spring and achieve initial movement of the plunger's pin.
- The force required in Newtons (N) to fully compress the spring until the pin is fully depressed against the plunger's body.



Spring Loads



Wixroyd Side-Thrust Pins

for clamping, positioning and holding components




Wixroyd side-thrust pins are an economical way to clamp, hold and position components - from low height PCB's to relatively large castings.




Easy to Use

Simple to mount, easy to use and space saving.

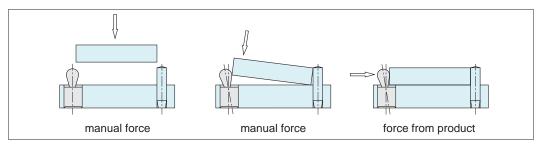

- Easy handling.
- Minimum mounting space.
- Simple and rapid changeover.
- Ideal for flat pieces.
- Reduced clamping times.
- Constant clamping pressure.

Installation Calculations of Side Thrust Pins

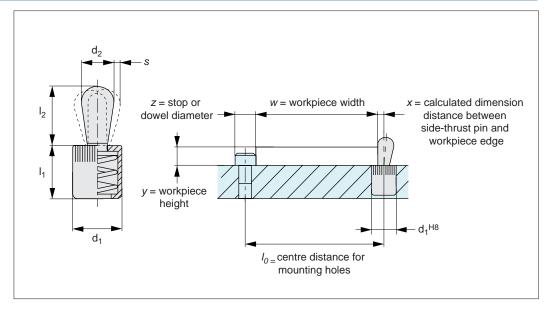

- A) Calculating centre distance for mounting holes (l_0) ;
 - $l_0 = (z/2) + w + x$
- B) Calculating pin location (x);

When workpiece height (y) is greater than or equal to l_2 - $(d_2/2)$ then (x) is calculated as; $x = (d_2/2) - s$

When workpiece height (y) is less than l_2 -(d_2 /2) then (x) is calculated as; $x=(d_2/2)-s-\{[l_2-(d_2/2)-y]*0.123\}$

 l_0 = centre distance for mounting holes

y = workpiece height

w = workpiece width

x = distance between side-thrust pin and workpiece edge

s = stroke

z = stop or dowel stop diameter





Wixroyd Side-Thrust Pins

factors to consider in pin selection



The best selection of side thrust pins is made with consideration to the following four factors:

- a) Pin size Ø
- c) Sealed or non-sealed pin
- b) Pin material
- d) Required pin force

Pin size Ø	Application		
3 mm	Circuit boards, thin metals		
4 mm	Electronics, measuring equipment, small precise parts		
5 mm	Drilling jigs, sheet metal, measuring devices, welding fixtures		
6 mm	Fixtures for light machine parts and castings		
8 mm	Fixtures for medium machine parts and castings		
10 mm	Fixtures for heavy machine parts and castings		

Plastic pins for sensitive parts. Steel pins for other parts. Stainless steel pins in corrosive environments.

D •		• •
Uin	M つナハ	ורדא
Pin	יומוכ	:i iai

Sealed or **Non-sealed Pin**

Pin Size Ø

With/without seal	Application	Operation	
Use side-thrust pins with seal	Milling, drilling, reaming, broaching, honing, engraving	Machining	
e.g. 32820, 32850 etc	Washing, polishing, painting, sand blasting	After machining	
	Gluing, welding, hard soldering	Prior to machining	
Use side-thrust pins without seal	Gripping, inserting, fitting	Final mounting	
e.g. 32810, 32840 etc	Measuring, controlling, loading	Quality assurance	
	Soft soldering, checking	Processing circuit boards	

Positioning applications 30 - 60 N. Clamping applications 90 - 150 N.

Compression Pressure Low Medium High **Spring Type** Black Spring Colour Stainless

Available in an aluminium body, and in various spring pressures from 10 to 300N. Each pin size is usually available in 3 spring pressures.

Available in elastomer body and in various spring pressures from 10 to 160N.

Blue

Elastomer Spring Type

Typical Applications


Pinforce - Guide Only

Side-thrust pins find applications in the following industries and more:

• Automotive. Aviation.


• Electronics.

- Computing.
- Plastics.
- Medical.
- Precision engineering.
- Tool manufacturing.




Positioning and clamping even extremely flat parts (e.g. metal sheets and printed circuit boards).


ov-W32810-A-T-W32870-A-T-b-rnh - Updated - 27-10-2022



Positioning and clamping round metal using the deep drawing effect.



Space saving positioning and clamping from the inside to the outside.



Positioning and clamping different profiles when welding. Material expansions compensated for by flexibility of the side-thrust pin.

