


### Panel Latches - Stainless Steel

insert driver - fixed grip

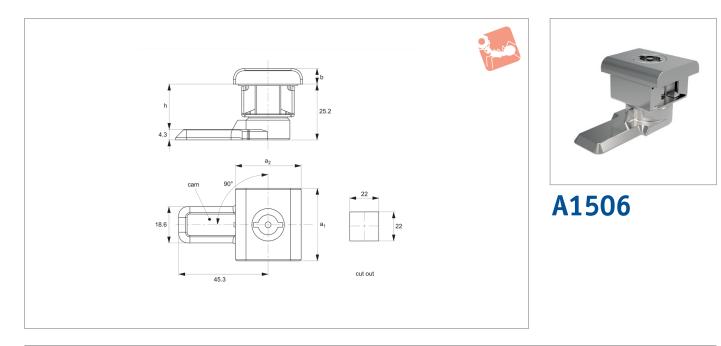



#### Material

Housing & insert: stainless steel, 304 mirror polished. Sealed to achieve IP54 rating.

Supplied with: Cam: die cast zinc. Not supplied: KEY - order separately.

#### **Technical Notes**

Order key separately. Suitable keys -A0102. Fixed grip length (h)=20,9.

Order No.	Insert	a <sub>1</sub>	a <sub>2</sub>	b	h
A1506.AW0036	3mm Double Bit	36	32	7	20.9





# Selecting the Correct Cam Latch or Lock



When selecting a Wixroyd Cam Latch for your application, you need to answer these questions:

1. Which installation cut out?

2. Which body style?

Cut out

- 3. Which locking key? 4. Which accessories?
- 5. Which cam type and size?

20.2

flexi-system

cut out

Typically single point latching is required, but the

Wixroyd Flexi-System also provides multi-point latching (typically 3 point - at lock point, top and

Number of latching points in application

Step 1: Which installation cut out?

CAM LATCHES

Step 2: Which body style?

#### **Material and finish**

installations.

Select from our variety of die cast zinc, polyamide plastic and stainless versions.

All our Flexi-System cam latches use a standard

maximum flexibility. We also provide a number of

alternative cut out dimensions for legacy/historical

installation cut out 22,2 dia, 20,2 square, for





Die-cast zinc chrome plate

handle type.

Insert driver

driver keys

correct keys.

**Standard insert** 

Our range of insert driver cam latches

require a simple key to

actuate. Refer to part A0102 and A0103 for

Die-cast Polyamide zinc black black

Standard insert driver type, cylinder lock or wing

coated

Actuation and locking method

Stainless steel

Single point

Multi-point



bottom of cabinet).



Two point



Wing handle

#### **Cylinder locking**

Our cam locks with cylinder locks are supplied with two keys per lock. Available as keyed alike or keyed to differ locks.



#### Step 4: Which accessories?

Which locking key?

Step 3:

- Multi-point latching: use our rod set A0303 to A0325 for suitable rods and rod guides.
- Finger pulls: easily installed with any of our flexi-system cam bodies, finger pull no. A0352 is a simple, cost effective handle for your cabinets.
- Dust Cap: to reduce material ingress.






wixroyd.com

### **Vixroyd Cam and Compression Latches**



CAM LATCHES

product selection charts

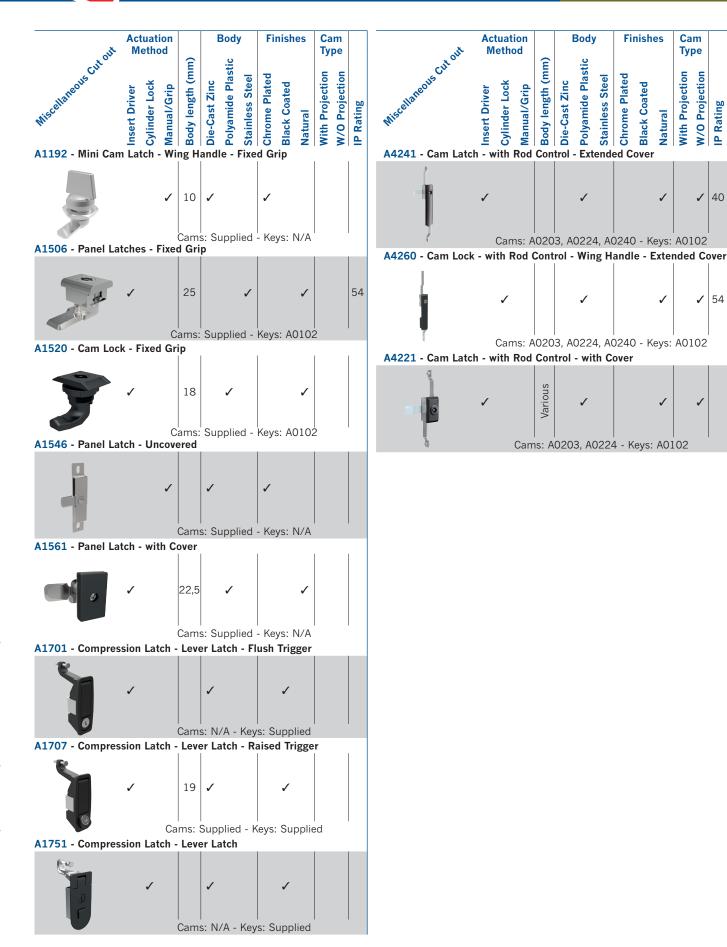







#### With or without "Projection"


Different cam bodies require cams either with or without projection.

### Step 5:

CAM LATCHES

Which cam type and size? Wixroyd cams are available in a number of different materials; zinc plated steel,

materials; zinc plated ster stainless steel (AISI 304) and black plastic.

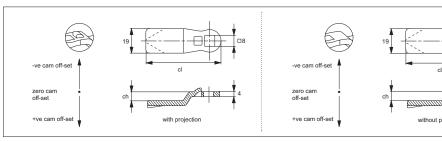

With projection cams prevent turning of the cam over 45°, but is not suited to all cam bodies. For correct projection type please see individual cam body technical pages.

#### **Number of Latching Points**

Single point cams are suitable where just single point latching is required. Multi-point cams are for applications requiring 2 or 3 latching points.

### Calculation of correct cam off-set

This is the most important aspect of the selection process.

Cam off-set (dimension ch)

To ensure your cam fully and correctly engages with the frame of your door the correct cam offset must be selected. A cam off-set can be either negative (-ve) or positive (+ve).

#### Cam length (dimension cl)


This impacts the reach of the cam to door frame and hence impacts positioning of cam body for installation. Cam length is measured from the centre of the cam fixing hole to the cam's leading edge. Most typically cams are 45 mm in length. Use formula to calculate ch (required cam offset), and refer to the cam selction chart.

ch = h - lh where;

ch

h

- = the required cam off-set/height
- grip length (distance between inside of latch face and front of cam).
- Ih = body length of cam latch/lock to be used
  (see example below)



## Example of calculation of correct cam off-set


#### Example one

Cam body A1003.AW0010 has been selected for the application. If we refer to the data sheet for this part, suitable cams are parts A0203, A0210 or A0240 - "without projection".

Known application information: h = 26 lh = 18

Therefore; ch = 26 - 18 = +8Cam off set of +8 is required

Using the data tables for cams A0203, A0210, and A0240 we can select the following cams without projection with an off set of + 8; A0203.AW5408 (steel), A0210.AW0428 (stainless) or A0240.AW0108 (three point cam).

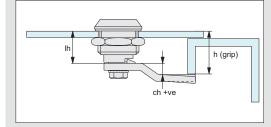

#### Example two


Cam body A1003.AW0010 has been selected for the application. If we refer to the data sheet for this part, suitable cams are parts A0203, A0210 or A0240 - "without projection".

Known application information: h = 14 lh = 18

Therefore; ch = 14 - 18 = -4

The required cam off set is negative, - 4 as the application's door frame is effectively shorter/lower than the length of the cam body

Using the data tables for cams A0203, A0210 and A0240 we can select the following cam without projection with an off set of - 4; A0203. AW6404 (steel).

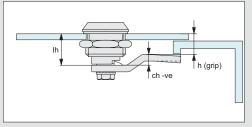



wixroyd.com