



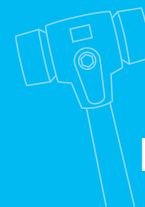

Rebound Punches - Complete with nylon inserts



Mallets & Hammers

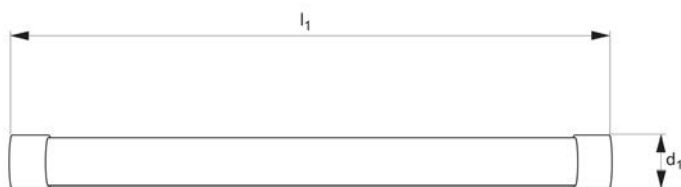

98401

MALLETS & HAMMERS

Material

Steel body with nylon inserts.

Tips

For replacement inserts see;
- inserts no. 98402


Technical Notes

Inserts are replaceable see part no. 98402.

Order No.	Insert type	Ø d ₁	l ₁	Weight g
98401.W0010	Nylon - White	10	168	90
98401.W0012	Nylon - White	12	170	130
98401.W0015	Nylon - White	15	175	200





98402

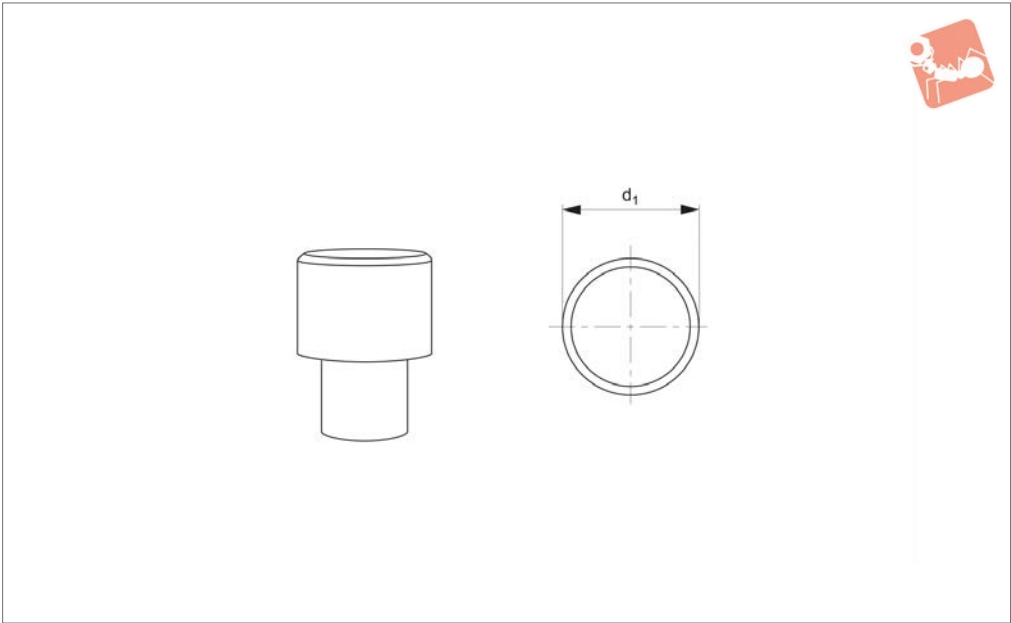

Material
Nylon, white.

Order No.	Type	For mallet head dia. d ₁
98402.W0110	Nylon - White	10
98402.W0112	Nylon - White	12
98402.W0115	Nylon - White	15

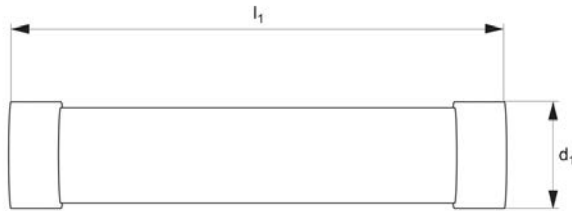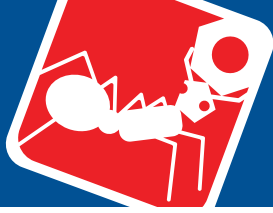

98421

Material

Housing: steel.

Insert: nylon, white.

Technical Notes

Shot filled housing results in a non-


rebound action and assists in full transmission of impact force.

Inserts are replaceable. See part no. 98422.

Tips


For replacement inserts see;
- inserts no. 98422

Order No.	Insert type	Ø d ₁	l ₁	Weight g
98421.W0020	Nylon - White	20	150	215
98421.W0025	Nylon - White	25	150	340
98421.W0030	Nylon - White	30	155	470
98421.W0035	Nylon - White	35	155	630
98421.W0040	Nylon - White	40	160	785
98421.W0045	Nylon - White	45	160	965
98421.W0050	Nylon - White	50	165	1250

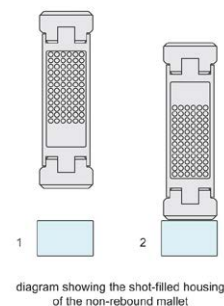




98422

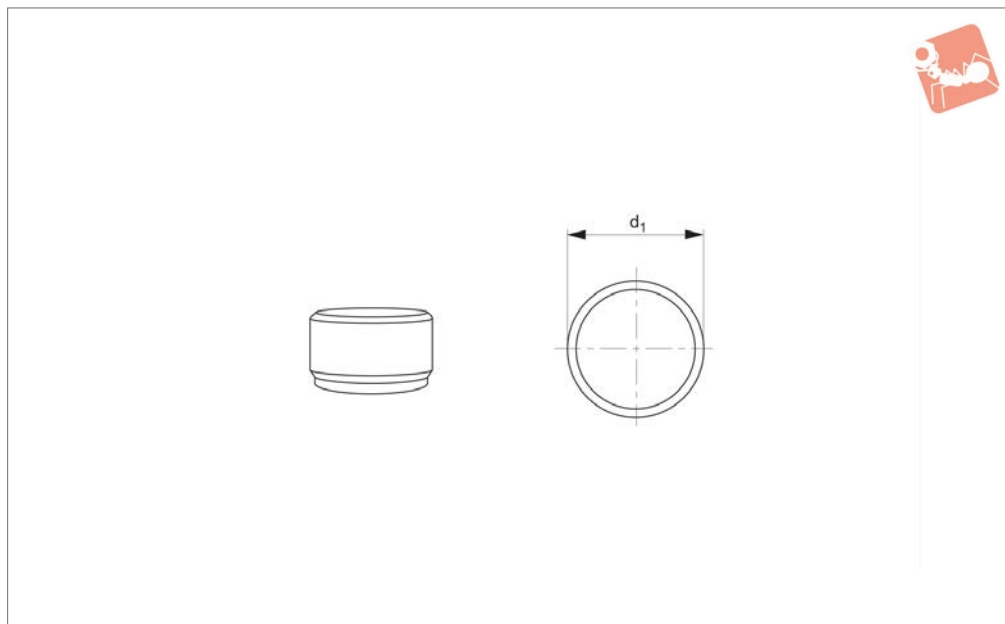

Material

Insert: nylon, white.

Order No.	Type	For mallet head d_1
98422.W0120	Nylon - White	20
98422.W0125	Nylon - White	25
98422.W0130	Nylon - White	30
98422.W0135	Nylon - White	35
98422.W0140	Nylon - White	40
98422.W0145	Nylon - White	45
98422.W0150	Nylon - White	50

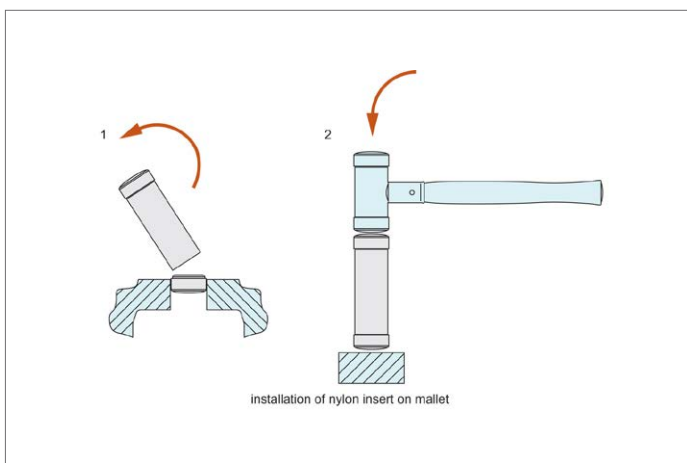



Application Selection Chart

Application selection chart													
													
TPE-soft	Com-posite rubber	TPE-mid	Plastic	Super plastic	Nylon	Alu	Copper	98301 wood	98301 steel	98301 fibre	98310	98321	98401
Soft	Med	Med	Hard	Med	Hard	Hard	Hard						
Range of inserts for Simplex mallets 98001 to 98224								Range of mallet handle types					

Construction applications													
Paving		•	•		•								
Floor tiling	•		•										
Curbstone setting / Masonry work		•			•								
Concrete form set-up		•		•									
Scaffold construction		•		•	•	•							
Tent and hall construction					•	•		•					
Gardening and landscaping		•			•								
Home construction		•	•										

Metal-working industry applications													
Automotive assembly and repair work				•	•	•	•	•	•	•	•	•	•
Positioning of workpieces in a vice								•	•	•	•	•	
Straightening work						•		•	•	•	•		
Joining of workpieces						•		•	•	•	•	•	•
Repair and maintenance work				•			•	•	•	•	•	•	•
Car body work				•	•		•	•	•	•	•	•	•
Sheet metal working				•	•	•		•	•	•	•	•	•
Dent removal	•	•		•	•	•					•	•	•
Housing assembly					•	•		•	•	•		•	•
Mould construction						•	•						•
Assembly of sharp-edged workpieces					•	•		•	•	•			•

Wood-working applications													
Furniture assembly	•		•									•	•
Window and door construction	•		•									•	•
Prefabricated house construction		•											
Joiner's work	•		•									•	•
Carpenter's work		•											
Floor parqueting / laminating												•	

Agriculture and forestry applications													
Fence construction		•			•			•					
Wood splitting with wedge					•			•					
Maintenance and repair work on agricultural machinery						•		•					•