



Slide the T-nut into the T-slot position and tighten the clamp onto the T-slot base, with the aid of the clamp key (shown in the image in blue).

Clamp the workpiece by twisting the key. Start machining.

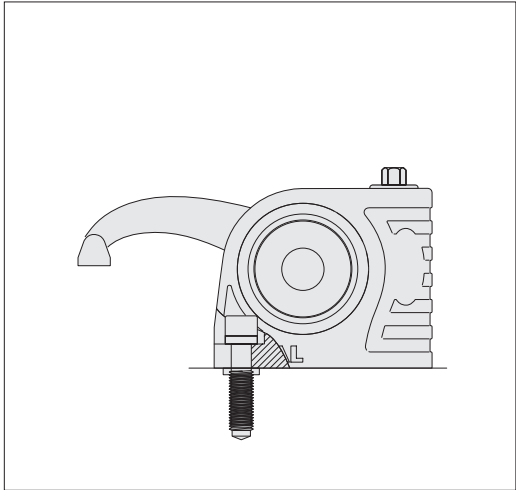


Fix to threaded bases with a special screw M10, M12, M14, M16.

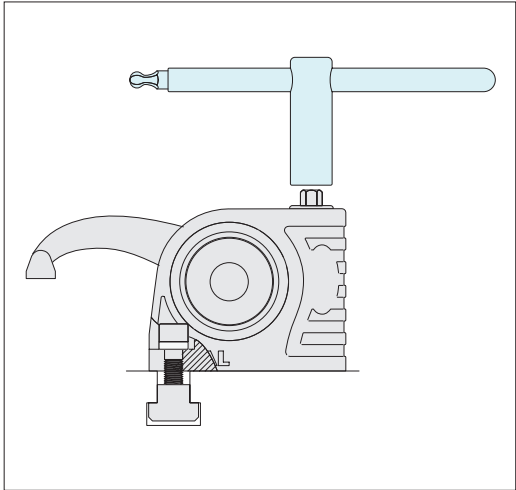

Fix to T-slots with suitable T-nuts.

When unclamped the arm and the clamp remain in position

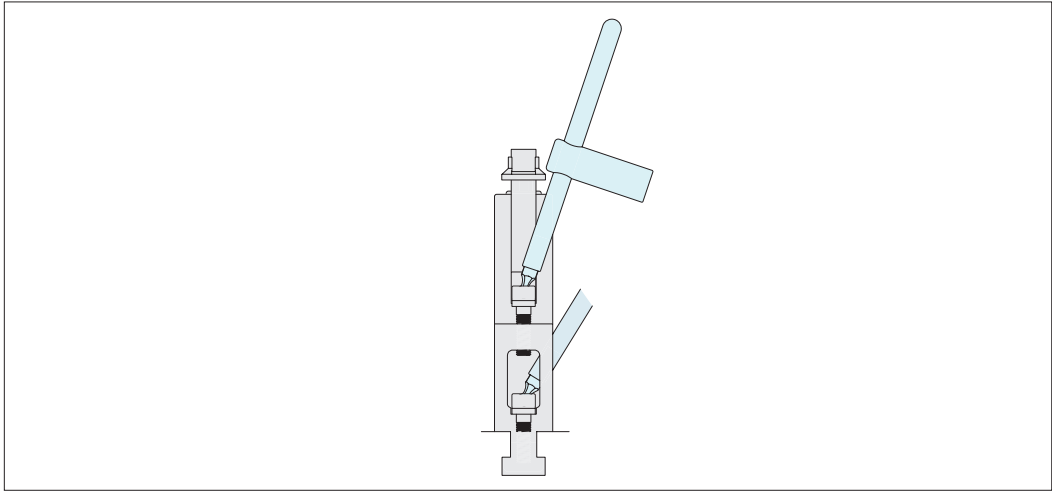

The clamps are easily stackable to achieve required clamping height.