


Spring Plungers smooth model, long



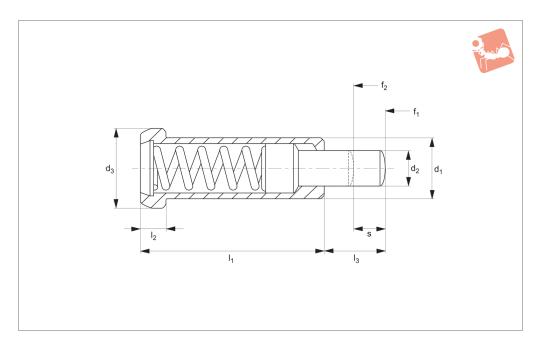

32400

Material

Body: free cutting steel, blackened. Pin: case hardened steel, blackened. Spring: stainless steel.

Technical Notes

Used as pulling off pins and spring stops in


tool making. No part of the spring plunger can come out of the retaining bore. Recommended installation hole tolerance H7. Temperature range up to 250°C. Spring load * = statistical average values.

Tips

Do not push pin beyond spring range ,s', as this will damage spring and result in reduction of spring load.

Special types available on request.

Order No.	d ₁ 0 -0.05	d ₂	d ₃	l ₁	I ₂	l ₃	Spring load F ₁ N ≈	Spring load F ₂ N ≈	s spring range	Weight g
32400.W0010	10	5.9	13	30	4.0	10	42	110	5.5	16.0
32400.W0006	6	2.7	8	20	3.2	6	10	22	3.5	4.2
32400.W0008	8	3.9	10	24	3.2	8	30	88	4.5	7.7
32400.W0012	12	7.9	16	36	5.0	12	50	130	6.5	27.0

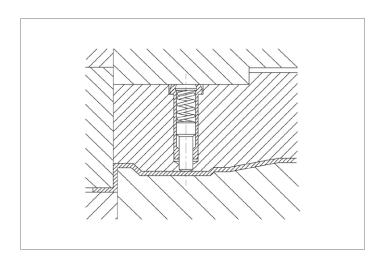




Positioning Elements



Wixroyd Spring Plungers - A Range of Endless Possibilities

Made of high quality steel and stainless steel, Wixroyd's Spring Plunger range is proven to be reliable for millions of repetitions in securing, positioning, positive locking, indexing and quick release. Their application is limited only by the imagination!

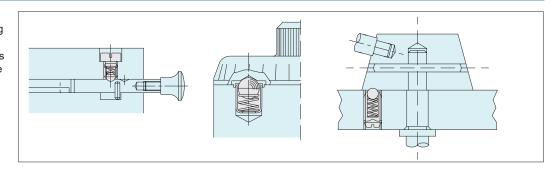

Commercial Lighting

Three push-fit spring plungers no. 32000 have been added to the design of this recessed commercial light fitting. The push-fit design of the plunger makes for easy assembly during production. Their use greatly simplifies the mounting and servicing of the units, reducing handling costs and saving valuable operator time.





Medical Applications

Used in conjunction with a simple hinge, Wixroyd spring plunger 32300 provides an easy and secure means to positively position and secure the back panel of a blood gas analysis machine. With both brass and stainless steel varieties, our spring plungers have a wide range of application in the medical, pharmaceutical, food and drink processing industries.





Applications

Uses

- For location, applying pressure and "lifting off".
- · Securing and positioning.
- Positive locking and indexing.
- Quick release.

Industry Sectors

- Machine and fixture design.
- Measuring equipment.
- Electronic components.
- · Lighting equipment.
- Medical, optics and orthopaedics.


Wixroyd Spring Plungers - Uses and Mounting Options

Ball Type



- 31400 • 32280
 - 31420 • 32300
- 31500 • 32302
- 32350 32000 32100
- 32102

Mounting Options



Rear slot



hexagon




Push fit

Pin Head Type



- 31000 • 32400
- 32420 31600
- 32150 32200
- 32220
- 32282

Mounting Options



Rear slot



Rear hexagon



Push fit



Front slot





Wixroyd Spring Plungers

quality products



Quality products every time

• Every spring plunger that is produced on the Wixroyd assembly line is individually tested. That is how we guarantee the quality of our products.

100% Testing


• A Wixroyd spring plunger is tested against four key criteria during manufacture.




Accuracy of 'S' Stroke/ Spring Range



Accuracy of f₁ and f₂ Spring Forces

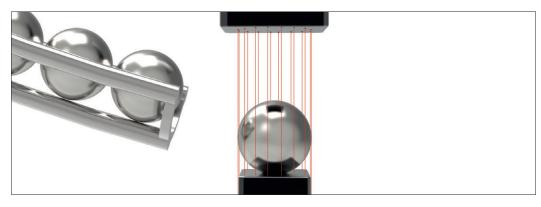

Accuracy of Ball Diameter

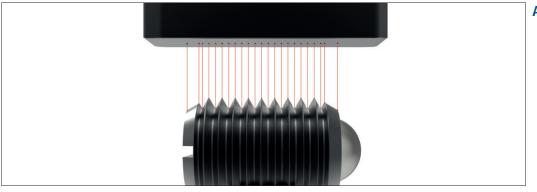

Accuracy of Thread



ov-W31400-A-T-W32420-A-T-b-rnh - Updated - 27-10-2022

Wixroyd Spring Plungers

metric thread

3

Thread (D)

Pitch



22

24

3,0

Thread Details

All Wixroyd metric spring plungers have a coarse thread.

150	metric	coars	e thre	eads (r	nm)				
5	6	7	8	10	12	14	16	18	

0,7 0,75 0,8 1,0 1,0 1,25 1,5 1,75 2,00 2,0

Spring Loads


Stroke, or movement of plunger's ball or pin.

35

4

45

- The force required in Newtons (N) to over come the static strength of the spring and achieve initial movement of the plunger's ball or pin.
- f. The force required in Newtons (N) to fully compress the spring until the ball or pin is fully depressed against the plunger's body.

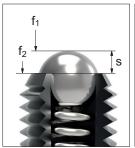




20


Typical Spring Repetitions

Although dependent upon a number of application specific factors, we are able to give the following guide relating to the maximum number of spring repetitions or cycles of our spring plungers.

- 100% or full stroke "s" used: approx. 300,000 cycles.
- 65% of stroke "s" used: approx 10,000,000 cycles.

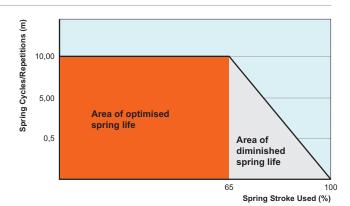

Calculating **Indexing Resistance**

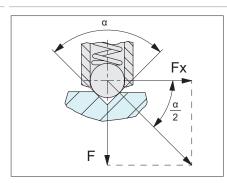

Important Note: This is only an approximation formula. For more accurate calculation the roughness of the counterpart surface as well as any variation in the plungers spring force (due to age or high repetitions) should be considered.

We are able to provide the following formula as an approximation of the pull or push force (N) required to 'release' a ball plunger from its indexing counterpart.

$$Fx = \frac{F}{\tan \frac{\alpha}{2}}$$

Fx = pull or push force (N)

plungers spring force (see relevant product table)

If $\alpha = 60^{\circ}$

= angle of the indexing counter part face

For example:

For Spring plunger 31500.W0010;

F = 24N (see product table)

If
$$\alpha = 90^{\circ}$$

$$Fx = \frac{24}{\tan \frac{90}{2}} = 24$$

$$Fx = 24$$
 = 41,5N $\frac{60}{2}$

If
$$\alpha = 120^{\circ}$$

$$Fx = 24$$
 = 13,8N $\frac{120}{2}$

Electrical Conductivity

We are often asked the electrical conductivity of our spring plungers, unfortunately we are unable to provide any reliable information related to this as there are many factors in an application. We recommend you study the specific material properties of the spring plunger's component parts to make your own calculations, alternatively if in doubt make a test application.

Specials to Your **Own Design**

Manufacturing exactly to your specific requirements is also our strength. If you need a variation in spring pressure, plunger body or pin design we can assist with a special design item for volumes as low as 1,000 units.

For further information, or to request a quotation, please call our sales office on 0333 207 4497.