



32400

#### Material

Body: free cutting steel, blackened. Pin: case hardened steel, blackened. Spring: stainless steel.

# **Technical Notes**

Used as pulling off pins and spring stops in

tool making. No part of the spring plunger can come out of the retaining bore. Recommended installation hole tolerance H7. Temperature range up to 250°C. Spring load \* = statistical average values.

**Spring Plungers** 


smooth model, long

# Tips

Do not push pin beyond spring range ,s', as this will damage spring and result in reduction of spring load.

Special types available on request.

Order No.	d <sub>1</sub> 0 -0.05	d <sub>2</sub>	d <sub>3</sub>	l <sub>1</sub>	I <sub>2</sub>	I <sub>3</sub>	Spring load F <sub>1</sub> N ≈	Spring load F <sub>2</sub> N ≈	s spring range	Weight g
32400.W0010	10	5.9	13	30	4.0	10	42	110	5.5	16.0
32400.W0006	6	2.7	8	20	3.2	6	10	22	3.5	4.2
32400.W0008	8	3.9	10	24	3.2	8	30	88	4.5	7.7
32400.W0012	12	7.9	16	36	5.0	12	50	130	6.5	27.0

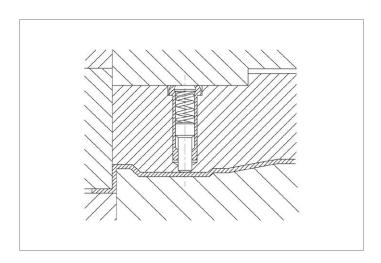






# **Wixroyd Spring Plungers - A Range of Endless Possibilities**

Made of high quality steel and stainless steel, Wixroyd's Spring Plunger range is proven to be reliable for millions of repetitions in securing, positioning, positive locking, indexing and quick release. Their application is limited only by the imagination!

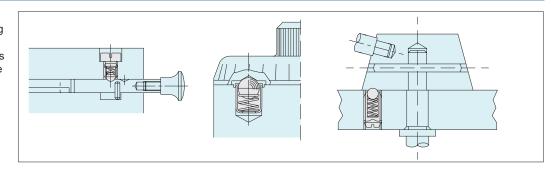

# **Commercial Lighting**

Three push-fit spring plungers no. 32000 have been added to the design of this recessed commercial light fitting. The push-fit design of the plunger makes for easy assembly during production. Their use greatly simplifies the mounting and servicing of the units, reducing handling costs and saving valuable operator time.

**Wixroyd Spring Plungers** 





# **Medical Applications**

Used in conjunction with a simple hinge, Wixroyd spring plunger 32300 provides an easy and secure means to positively position and secure the back panel of a blood gas analysis machine. With both brass and stainless steel varieties, our spring plungers have a wide range of application in the medical, pharmaceutical, food and drink processing industries.





### **Applications**

#### Uses

- For location, applying pressure and "lifting off".
- Securing and positioning.
- Positive locking and indexing.
- Quick release.

### **Industry Sectors**

- Machine and fixture design.
- · Measuring equipment.
- Electronic components.
- · Lighting equipment.
- Medical, optics and orthopaedics.

# **Wixroyd Spring Plungers - Uses and Mounting Options**

# **Ball Type**



- 31400
- 32280

• 32420

- 31420 32300
- 31500 32302
- 32000 32350
- 32100
- 32102

#### **Mounting Options**







Rear slot

Rear slot

Rear hexagon


Push fit

# **Pin Head Type**



- 31000 32400
- 31600
- 32150
- 32200
- 32220
- 32282

#### **Mounting Options**







Push fit

Front slot



wixroyd.com



# **Wixroyd Spring Plungers**

quality products




# Quality products every time

• Every spring plunger that is produced on the Wixroyd assembly line is individually tested. That is how we guarantee the quality of our products.

100% Testing


• A Wixroyd spring plunger is tested against four key criteria during manufacture.

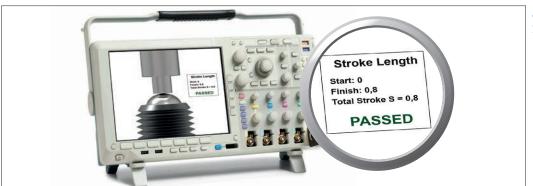


Accuracy of 'S' Stroke/ Spring Range



Accuracy of f<sub>1</sub> and f<sub>2</sub> Spring Forces

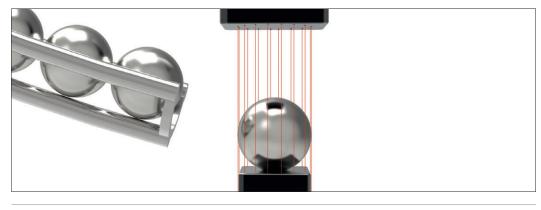

Accuracy of Ball Diameter

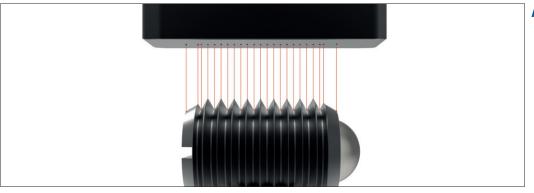

**Accuracy of Thread** 



ov-W31400-A-T-W32420-A-T-b-rnh - Updated - 27-10-2022

# **Wixroyd Spring Plungers**

metric thread



#### **Thread Details**


All Wixroyd metric spring plungers have a coarse thread.

ISO metric coarse threads (mm)	ISO	metric	coarse	threads	(mm)
--------------------------------	-----	--------	--------	---------	------

Thread (D) 3 35 4 45 5 6 7 8 10 12 14 16 18 20 22 24 Pitch 1,25 1,5 0,7 0,75 0,8 1,0 1,0 1,75 2,00 2,0 2,5 3,0

# **Spring Loads**

- Stroke, or movement of plunger's ball or pin.
- The force required in Newtons (N) to over come the static strength of the spring and achieve initial movement of the plunger's ball or pin.
- f. The force required in Newtons (N) to fully compress the spring until the ball or pin is fully depressed against the plunger's body.

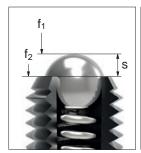





# **Typical Spring** Repetitions

Although dependent upon a number of application specific factors, we are able to give the following guide relating to the maximum number of spring repetitions or cycles of our spring plungers.

- 100% or full stroke "s" used: approx. 300,000 cycles.
- 65% of stroke "s" used: approx 10,000,000 cycles.

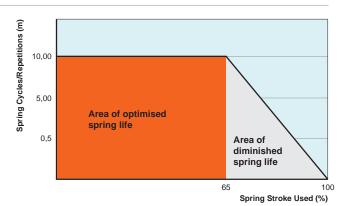

# Calculating **Indexing Resistance**

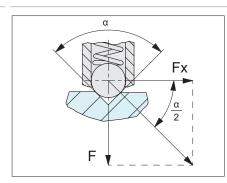

**Important Note: This is only** an approximation formula. For more accurate calculation the roughness of the counterpart surface as well as any variation in the plungers spring force (due to age or high repetitions) should be considered.

We are able to provide the following formula as an approximation of the pull or push force (N) required to 'release' a ball plunger from its indexing counterpart.

$$Fx = \frac{F}{\tan \frac{\alpha}{2}}$$

Fx = pull or push force (N)

F = plungers spring force (see relevant product table)

If  $\alpha = 60^{\circ}$ 

= angle of the indexing counter part face

#### For example:

For Spring plunger 31500.W0010;

F = 24N (see product table)

If 
$$\alpha = 90^{\circ}$$

$$Fx = \frac{24}{\tan \frac{90}{2}} = 24$$

$$Fx = 24$$
  $= 41,5$   $\tan \frac{60}{2}$ 

$$Fx = 24$$
 = 13,8th  $\frac{120}{2}$ 

# **Electrical Conductivity**

We are often asked the electrical conductivity of our spring plungers, unfortunately we are unable to provide any reliable information related to this as there are many factors in an application. We recommend you study the specific material properties of the spring plunger's component parts to make your own calculations, alternatively if in doubt make a test application.

# Specials to Your **Own Design**

Manufacturing exactly to your specific requirements is also our strength. If you need a variation in spring pressure, plunger body or pin design we can assist with a special design item for volumes as low as 1,000 units.

For further information, or to request a quotation, please call our sales office on 0333 207 4497.