




Side-Thrust Pins - Threaded without seal - for use with pins of your own design

Spring Plunger & Detent Pins

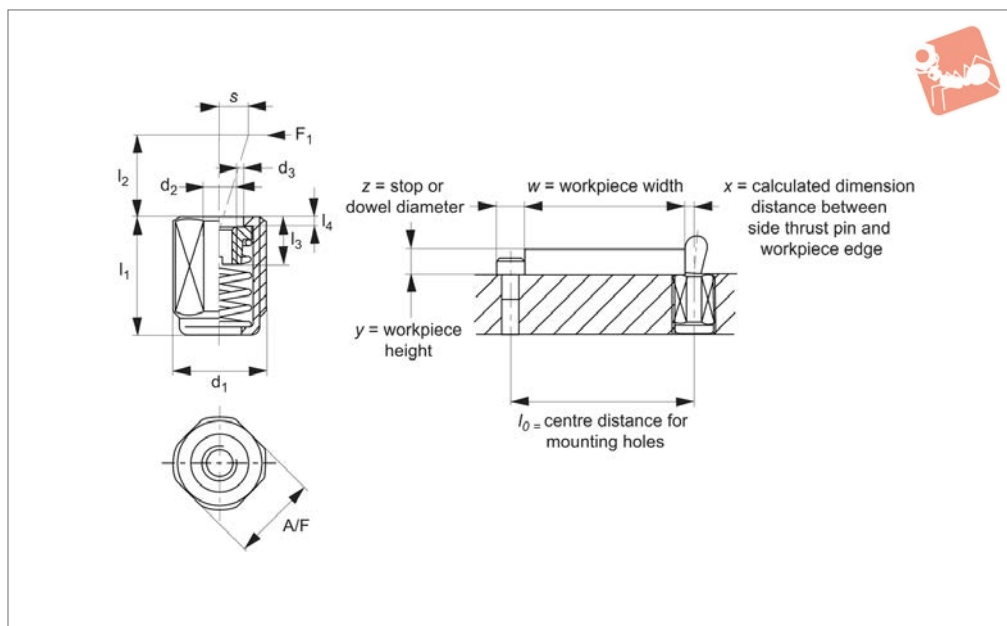

32860.1

SPRING PLUNGER & DETENT PINS

Material

Body: aluminium.

Threaded washer: steel, blackened.

Spring: steel (blackened or blue galvanized), or stainless steel.

Technical Notes

Press fit installation into hole d_1 to tol. H8, using fitting tool (order separately).

Installation calculations;

A) Calculating centre distance for mounting holes (l_0);

$$l_0 = (z/2) + w + x$$

B) Calculating pin location (x);

When workpiece height (y) is greater than or equal to $l_2 - (d_2/2)$ then (x) is calculated as; $x = (d_2/2) - s$

When workpiece height (y) is less than $l_2 - (d_2/2)$ then (x) is calculated as; $x = (d_2/2) - s - \{[l_2 - (d_2/2) - y] * 0.123\}$

l_0 = centre distance for mounting holes

y = workpiece height

w = workpiece width

x = distance between side-thrust pin and workpiece edge

s = stroke

z = stop or dowel stop diameter

Tips

Side-thrust pins are ideal for holding, clamping and positioning parts.

Spring colour gives visual indication of spring pressure (N).

Light spring load = natural stainless spring.

Standard spring load = steel spring, blackened.

Heavy spring load = steel spring, blue galvanized.

Order No.	Spring load	d_1	d_2	d_3	$l_1 - 2$	l_2	Weight g
32860.W0001	Light	M12	M4	6.1	11.5	4.0	3
32860.W0002	Light	M12	M4	6.1	19.0	4.0	5
32860.W0003	Light	M12	M4	6.1	26.5	4.0	7
32860.W0004	Standard	M12	M4	6.1	11.5	4.0	3
32860.W0005	Standard	M12	M4	6.1	19.0	4.0	6
32860.W0006	Standard	M12	M4	6.1	26.5	4.0	8
32860.W0007	Heavy	M12	M4	6.1	11.5	4.0	4
32860.W0008	Heavy	M12	M4	6.1	19.0	4.0	6
32860.W0009	Heavy	M12	M4	6.1	26.5	4.0	8
32860.W0010	Light	M12	M4	6.1	11.5	7.5	3
32860.W0011	Light	M12	M4	6.1	19.0	7.5	5
32860.W0012	Light	M12	M4	6.1	26.5	7.5	7
32860.W0013	Standard	M12	M4	6.1	11.5	7.5	3
32860.W0014	Standard	M12	M4	6.1	19.0	7.5	6
32860.W0015	Standard	M12	M4	6.1	26.5	7.5	8
32860.W0016	Heavy	M12	M4	6.1	11.5	7.5	4
32860.W0017	Heavy	M12	M4	6.1	19.0	7.5	6
32860.W0018	Heavy	M12	M4	6.1	26.5	7.5	9
32860.W0019	Light	M18x1,5	M6	10.1	18.0	11.5	15
32860.W0020	Light	M18x1,5	M6	10.1	31.5	11.5	23
32860.W0021	Light	M18x1,5	M6	10.1	45.0	11.5	32
32860.W0022	Standard	M18x1,5	M6	10.1	18.0	11.5	14



Order No.	Spring load	d ₁	d ₂	d ₃	l ₁ -2	l ₂	Weight g
32860.W0023	Standard	M18x1,5	M6	10.1	31.5	11.5	23
32860.W0024	Standard	M18x1,5	M6	10.1	45.0	11.5	32
32860.W0025	Heavy	M18x1,5	M6	10.1	18.0	11.5	14
32860.W0026	Heavy	M18x1,5	M6	10.1	31.5	11.5	23
32860.W0027	Heavy	M18x1,5	M6	10.1	45.0	11.5	32

Order No.	l ₃	l ₄	A/F	Spring colour	Spring pressure N	Stroke s	Temp. resistance °C max.	Fitting tool 32840
32860.W0001	4.5	1.5	10	S/S	20	1.6	250	.W0820
32860.W0002	4.5	1.5	10	S/S	20	1.6	250	.W0820
32860.W0003	4.5	1.5	10	S/S	20	1.6	250	.W0820
32860.W0004	4.5	1.5	10	Black	50	1.6	250	.W0820
32860.W0005	4.5	1.5	10	Black	50	1.6	250	.W0820
32860.W0006	4.5	1.5	10	Black	50	1.6	250	.W0820
32860.W0007	4.5	1.5	10	Blue	100	1.6	250	.W0820
32860.W0008	4.5	1.5	10	Blue	100	1.6	250	.W0820
32860.W0009	4.5	1.5	10	Blue	100	1.6	250	.W0820
32860.W0010	4.5	1.5	10	S/S	40	2.0	250	.W0820
32860.W0011	4.5	1.5	10	S/S	40	2.0	250	.W0820
32860.W0012	4.5	1.5	10	S/S	40	2.0	250	.W0820
32860.W0013	4.5	1.5	10	Black	75	2.0	250	.W0820
32860.W0014	4.5	1.5	10	Black	75	2.0	250	.W0820
32860.W0015	4.5	1.5	10	Black	75	2.0	250	.W0820
32860.W0016	4.5	1.5	10	Blue	100	2.0	250	.W0820
32860.W0017	4.5	1.5	10	Blue	100	2.0	250	.W0820
32860.W0018	4.5	1.5	10	Blue	100	2.0	250	.W0820
32860.W0019	7.5	1.5	16	S/S	100	3.2	250	.W0822
32860.W0020	7.5	1.5	16	S/S	100	3.2	250	.W0822
32860.W0021	7.5	1.5	16	S/S	100	3.2	250	.W0822
32860.W0022	7.5	1.5	16	Black	150	3.2	250	.W0822
32860.W0023	7.5	1.5	16	Black	150	3.2	250	.W0822
32860.W0024	7.5	1.5	16	Black	150	3.2	250	.W0822
32860.W0025	7.5	1.5	16	Blue	200	3.2	250	.W0822
32860.W0026	7.5	1.5	16	Blue	200	3.2	250	.W0822
32860.W0027	7.5	1.5	16	Blue	200	3.2	250	.W0822



A Wide Selection of Solutions

- Locating and positioning.
- Indexing.
- Securing.
- Positive locking.
- Rapid adjustment of all kinds of tables, platforms and fixtures.
- Machine and fixture design.
- OEM products.
- Sports equipment.
- Medical aides (wheelchairs etc.).
- Aerospace.
- Machine cabinets.

Applications

Materials

Locking or Non Locking

Handling and Actuation Methods

Mounting Options

Additional Technical Notes

Spring Loads



Steel with plastic grip



Stainless with plastic grip



Stainless body and grip



Locking (park)



Non locking (spring back)



Push pull



Standard grip



Lever grip



T-handle



Pull ring



Threaded for bespoke handle



Fine threaded (standard)



Coarse thread



Flange mount



Thin wall mount



Weldable


- Unless otherwise stated, grips on index plungers are not removable.
- Many of the pins on index plungers are toleranced to either the pin or the hole. Please refer to the specific product table.
- Index plungers are not recommended for shear load applications.

	Pin Tol.	Hole Tol.
①	h_9	+0,03 +0,08
②	-0,02 -0,04	H_7

s Stroke, or movement of plunger's pin.

f₁ The force required in Newtons (N) to overcome the static strength of the spring and achieve initial movement of the plunger's pin.

f₂ The force required in Newtons (N) to fully compress the spring until the pin is fully depressed against the plunger's body.

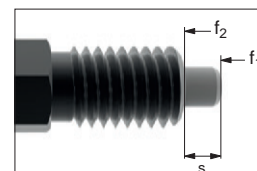




Wixroyd side-thrust pins are an economical way to clamp, hold and position components – from low height PCB's to relatively large castings.




Easy to Use

Simple to mount, easy to use and space saving.

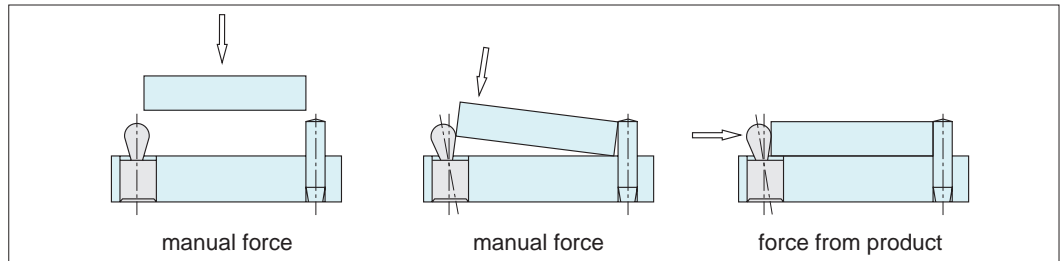

- Easy handling.
- Minimum mounting space.
- Simple and rapid changeover.
- Ideal for flat pieces.
- Reduced clamping times.
- Constant clamping pressure.

Installation Calculations of Side Thrust Pins

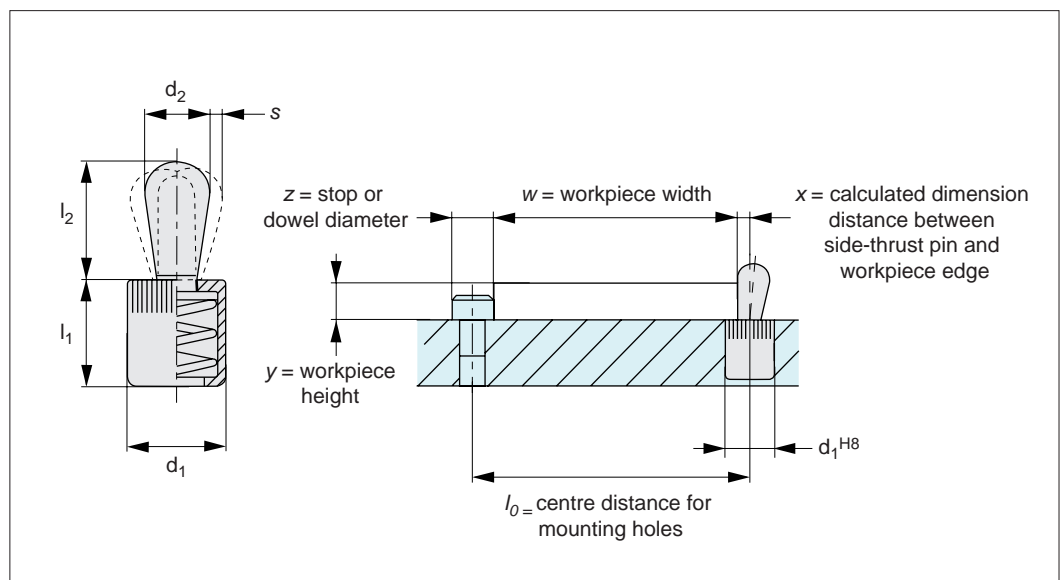

A) Calculating centre distance for mounting holes (l_0);

$$l_0 = (z/2) + w + x$$

B) Calculating pin location (x);

When workpiece height (y) is greater than or equal to $l_2 - (d_2/2)$ then (x) is calculated as;

$$x = (d_2/2) - s$$

When workpiece height (y) is less than $l_2 - (d_2/2)$ then (x) is calculated as;

$$x = (d_2/2) - s - \{[l_2 - (d_2/2) - y] * 0.123\}$$

l_0 = centre distance for mounting holes

y = workpiece height

w = workpiece width

x = distance between side-thrust pin and workpiece edge

s = stroke

z = stop or dowel stop diameter



Wixroyd Side-Thrust Pins

factors to consider in pin selection

32810 - 32870
Positioning Elements

The best selection of side thrust pins is made with consideration to the following four factors:

- a) Pin size Ø
- b) Pin material
- c) Sealed or non-sealed pin
- d) Required pin force

Pin size Ø	Application
3 mm	Circuit boards, thin metals
4 mm	Electronics, measuring equipment, small precise parts
5 mm	Drilling jigs, sheet metal, measuring devices, welding fixtures
6 mm	Fixtures for light machine parts and castings
8 mm	Fixtures for medium machine parts and castings
10 mm	Fixtures for heavy machine parts and castings

Pin Size Ø

Plastic pins for sensitive parts. Steel pins for other parts. Stainless steel pins in corrosive environments.

Pin Material

With/without seal	Application	Operation
Use side-thrust pins with seal e.g. 32820, 32850 etc	Milling, drilling, reaming, broaching, honing, engraving	Machining
	Washing, polishing, painting, sand blasting	After machining
Use side-thrust pins without seal e.g. 32810, 32840 etc	Gluing, welding, hard soldering	Prior to machining
	Gripping, inserting, fitting	Final mounting
	Measuring, controlling, loading	Quality assurance
	Soft soldering, checking	Processing circuit boards

Sealed or Non-sealed Pin

Positioning applications 30 - 60 N. Clamping applications 90 - 150 N.

Pinforce - Guide Only

Available in an aluminium body, and in various spring pressures from 10 to 300N. Each pin size is usually available in 3 spring pressures.

Pressure	Low	Medium	High
Spring Colour	Stainless	Black	Blue

Compression Spring Type


Available in elastomer body and in various spring pressures from 10 to 160N.

Elastomer Spring Type


Side-thrust pins find applications in the following industries and more:

- Automotive.
- Aviation.
- Electronics.
- Computing.
- Plastics.
- Medical.
- Precision engineering.
- Tool manufacturing.


Typical Applications

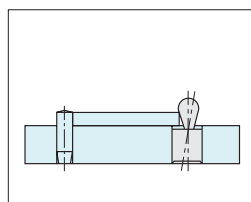


Positioning and clamping even extremely flat parts (e.g. metal sheets and printed circuit boards).

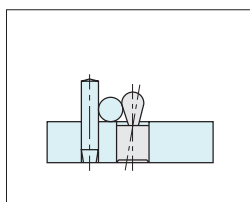

Positioning and clamping round metal using the deep drawing effect.

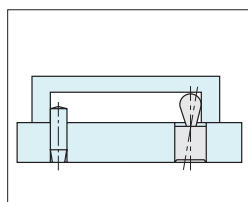

Space saving positioning and clamping from the inside to the outside.

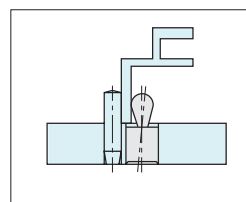

Positioning and clamping different profiles when welding. Material expansions compensated for by flexibility of the side-thrust pin.