




Anti-vibration Fail-Safe Mounts

A2 stainless

Anti-Vibration

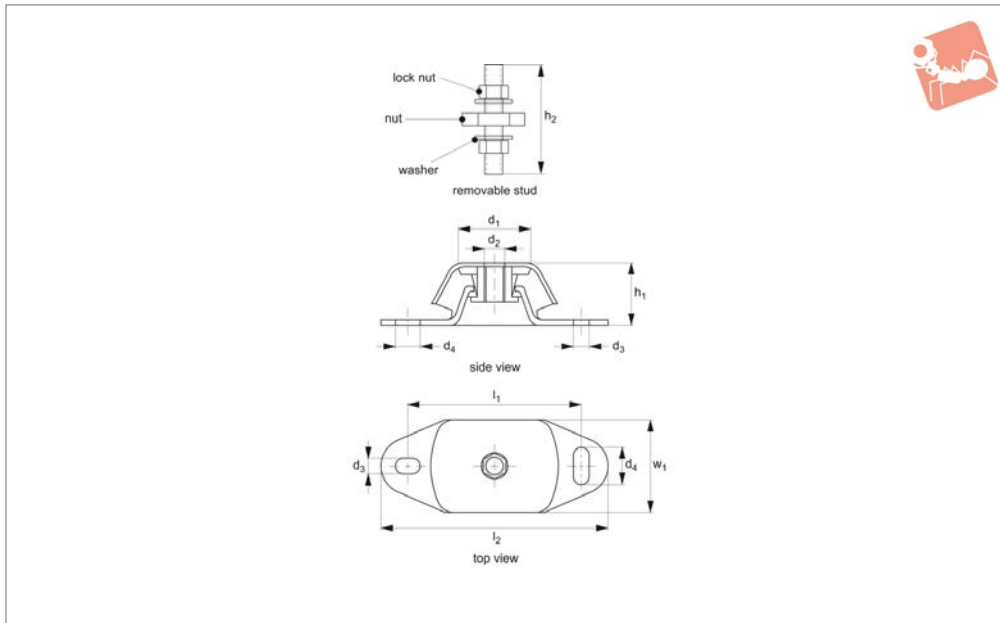

61292

ANTI-VIBRATION

Material

Stainless steel (AISI 304), (rubber hardness 45-65 Shore A).

Technical Notes

These mounts control vibration in three axes.

Primarily used for marine applications, engines, compressors, pumps, generators etc.

Fitted with a mechanical fail-safe stop. They are very robust to cope with high start/stop forces and vibrations from marine and other engines.

The stainless steel versions are widely used for marine engine mounts or outdoor applications. For offshore or highly corrosive environments use part no. 61294.

Stud and nuts on request.

Tips


These are a very popular anti-vibration mount for light to heavy duty applications. Take the total weight of the load to be supported, divide it by the number of mounts to be used and select an appropriate mount from the table.

Order No.	d ₁	d ₂	l ₁	l ₂	w ₁	d ₃	d ₄	h ₁	h ₂	Load N max.
61292.W0602	60	M12	100	120	60	11	14	40	95	100
61292.W0752	75	M16	140	183	75	13	20	50	110	300
61292.W0600	60	M12	100	120	60	11	14	40	95	50
61292.W0601	60	M12	100	120	60	11	14	40	95	65
61292.W0750	75	M16	140	183	75	13	20	50	110	150
61292.W0751	75	M16	140	183	75	13	20	50	110	200



Recommendations for machine mounts

Machine mounts should be installed between two parallel and perfectly flat surfaces. Mounts operating tilted or twisted do not work properly. This may be due to incorrect alignment, tolerances in the building of the structure or over-tightened torque during the installation of the anti-vibration mounts.

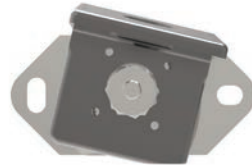

incorrect X



correct ✓



incorrect X



correct ✓



incorrect X



correct ✓



incorrect X



correct ✓



incorrect X



correct ✓