


# **Anti-vibration Cylinders** stainless male:male



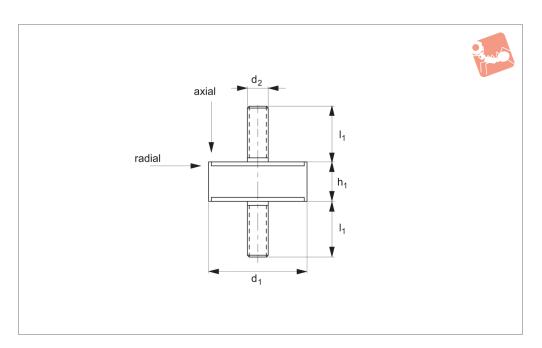

61042

## Material

Rubber on stainless steel, A2 (rubber hardness - 55 Shore A).

## **Technical Notes**

For rubber mounted on silver zinc plated

steel - see part no. 61040.

These cylinders are used to reduce vibration by allowing some movement (in axial and radial as shown).

Typically used in machinery, compressors, air conditioning units, light engineering equipment etc.

Order No.	$d_1$	h <sub>1</sub>	d <sub>2</sub>	l <sub>1</sub>	Compression	Axial load	Radial load
	-	*	-	-	max.	kgf	kgf
						max.	max.
61042.W0200	20	20	M 6	18	4	25	4.5
61042.W0201	20	25	M 6	18	5	25	4.0
61042.W0250	25	25	M 8	18	5	40	7.5
61042.W0251	25	30	M 8	18	6	35	7.0
61042.W0300	30	30	M 8	18	6	80	10.5
61042.W0301	30	40	M 8	18	8	60	13.0
61042.W0302	35	35	M 8	18	8	90	13.0
61042.W0400	40	30	M10	27	8	150	21.0
61042.W0401	40	40	M10	27	10	120	22.0
61042.W0500	50	30	M10	27	8	250	29.0
61042.W0501	50	40	M10	27	10	220	29.0
61042.W0502	50	50	M10	27	12	200	29.0
61042.W0600	60	45	M10	27	10	300	42.0
61042.W0601	60	60	M10	27	12	250	44.0




## **General Anti-vibration Cylinders**

installation methods for cylinders




## **Acceptable loads**

Cylindrical mounts are never to be used in tension, they should only be used in axial or radial. Radial loads are however considerably less than axial loads. Parts with small diameters  $(d_1)$  and relatively long lengths (h) cannot accept radial loads.

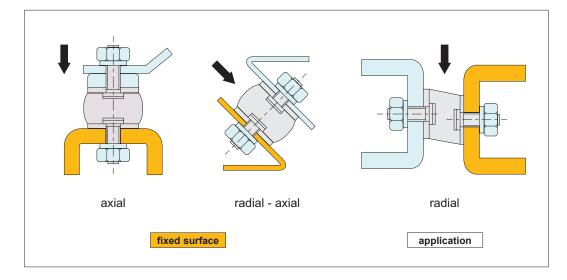

## **Installation**

## **Incorrect installation**

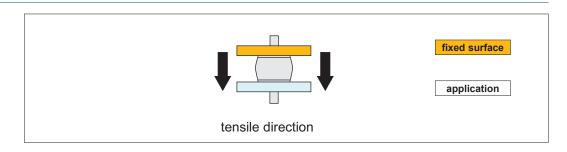

## **Correct installation**

The height of the insulator may vary as the rubber is compressed under load.

Do not remove the rubber burr around the edge of the metal, this could cause detachment of rubber from the metal studs.

