


# Anti-vibration Mounts

## rectangular



**Anti-Vibration**

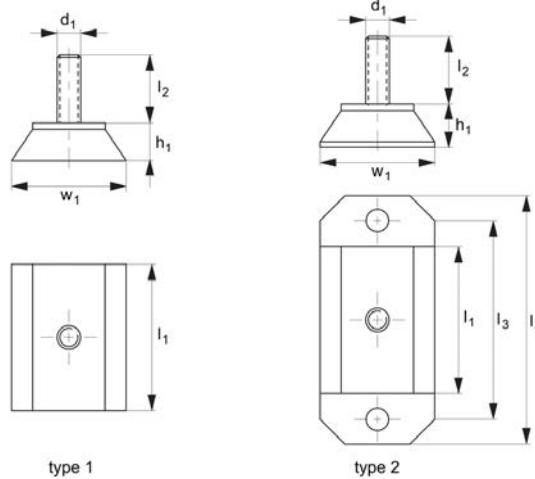

**61460**

### Material

Rubber on silver zinc plated steel (rubber hardness - 55 Shore A).

### Technical Notes

Used to support machine tools and packaging machinery.

Provides vibration isolation for frequencies higher than 20Hz.

Order No.	Type	d <sub>1</sub>	l <sub>1</sub>	h <sub>1</sub>	l <sub>2</sub>	l <sub>3</sub>	l <sub>4</sub>	w <sub>1</sub>	Axial load kgf max.	Compression max.
<b>61460.W0105</b>	Type 1	M12	50	20	37	-	-	60	250	2
<b>61460.W0110</b>	Type 1	M12	100	20	37	-	-	60	500	2
<b>61460.W0115</b>	Type 1	M12	150	20	37	-	-	60	750	2
<b>61460.W0120</b>	Type 1	M12	200	20	37	-	-	60	1000	2
<b>61460.W0205</b>	Type 2	M12	50	23	37	85	115	60	250	2
<b>61460.W0210</b>	Type 2	M12	100	23	37	135	165	60	500	2
<b>61460.W0215</b>	Type 2	M12	150	23	37	185	215	60	750	2
<b>61460.W0220</b>	Type 2	M12	200	23	37	235	265	60	1000	2



# General Anti-vibration Machine Mounts

## Installation methods for machine mounts



### Recommendations for machine mounts

Machine mounts should be installed between two parallel and perfectly flat surfaces. Mounts operating tilted or twisted do not work properly. This may be due to incorrect alignment, tolerances in the building of the structure or over-tightened torque during the installation of the anti-vibration mounts.

